

PAGE INTENTIONALLY BLANK



NICKEL CITY LINE
RAILROAD COMPANY

CUSTOMER SERVICE

MAPS

BRISTOW

CANOVA

KARTHAUS




LAUREL VALLEY

MILLS RIVER

MONSERRAT

SHEPPARDSFIELD

 Edition 9-23

-  Denotes Business not Served by Rail
-  Denotes Business Served by Rail
-  Denotes Roadway




OPERATIONAL NOTES

- 1) Return all ground throws to 'Normal' (Green) after use.
- 2) Any car that must be moved to spot another car must be replaced at the same location / door it was removed from.
- 3) No cars shall be stored on the Passing Track for anytime greater than 20 minutes.
- 4) Flag Protection / Fusee shall be in place when working the mainline.


PAGE INTENTIONALLY BLANK

BRISTOW SPUR INDUSTRY LOCATION MAP


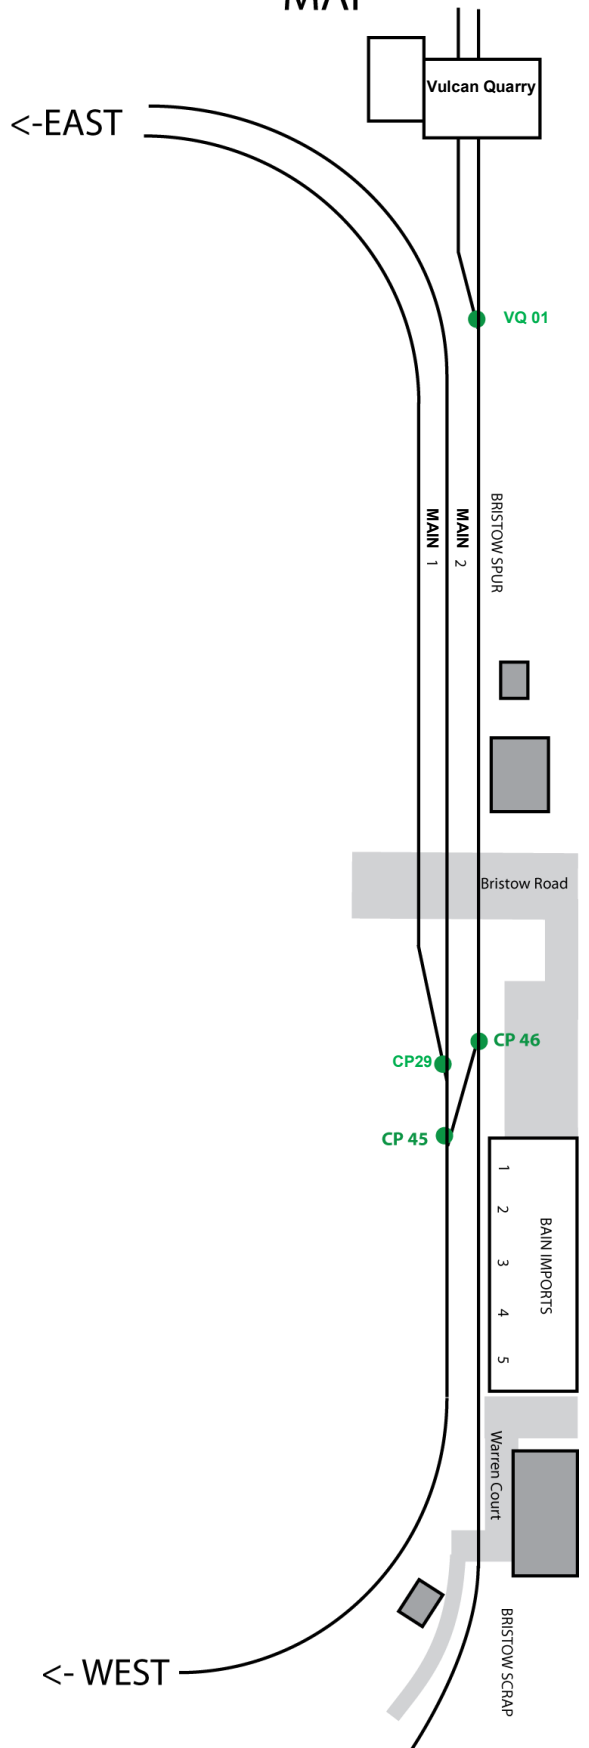


PAGE INTENTIONALLY BLANK


CANOVA INDUSTRY LOCATION MAP

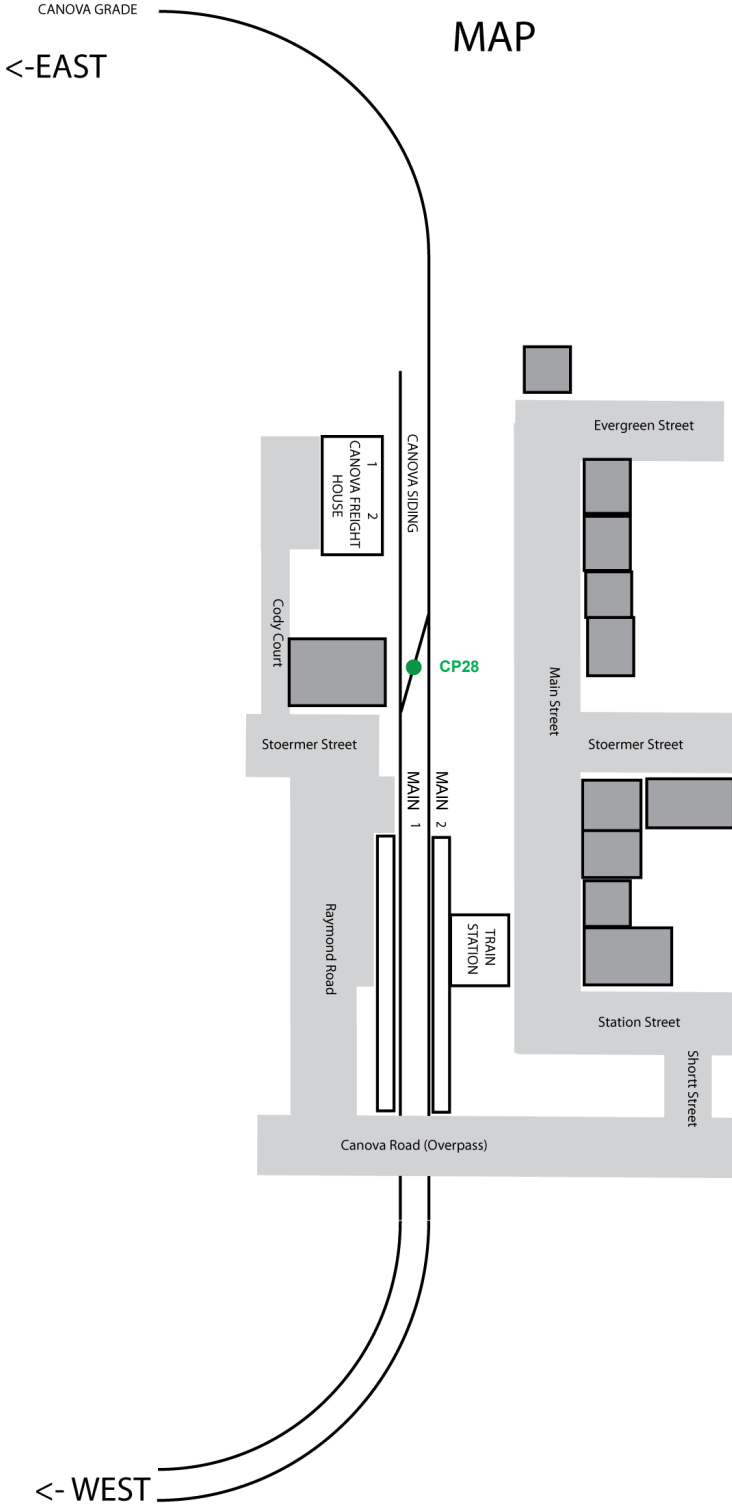


SHEPPARDSFIELD INDUSTRY LOCATION MAP

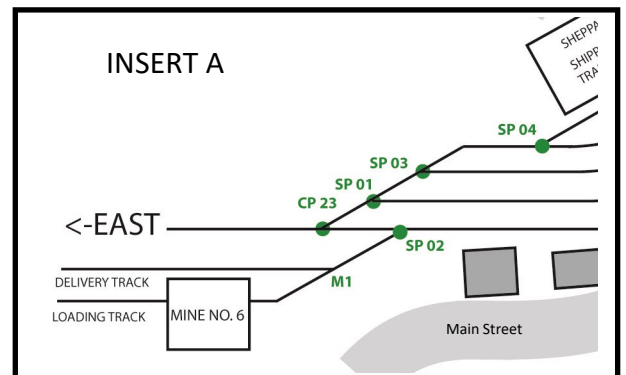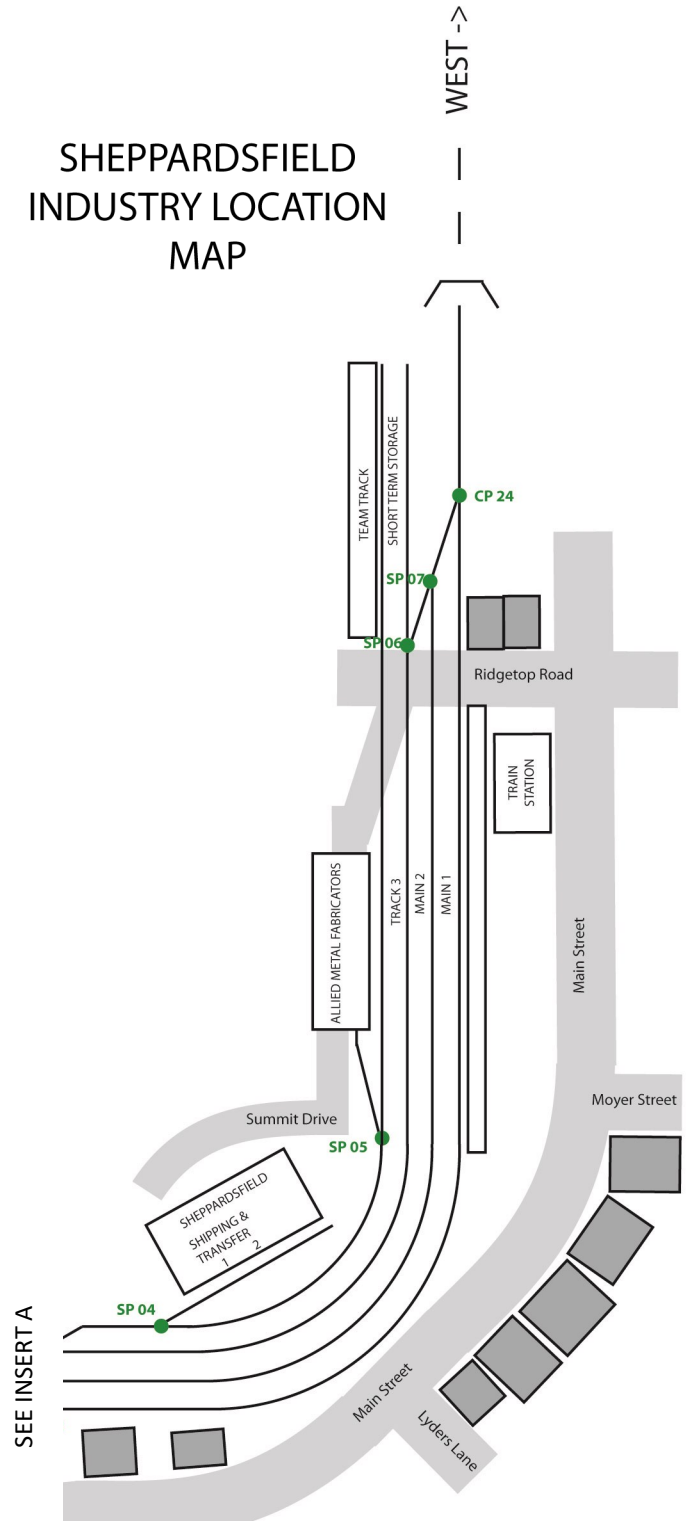


KARTHAUS LOCATION MAP

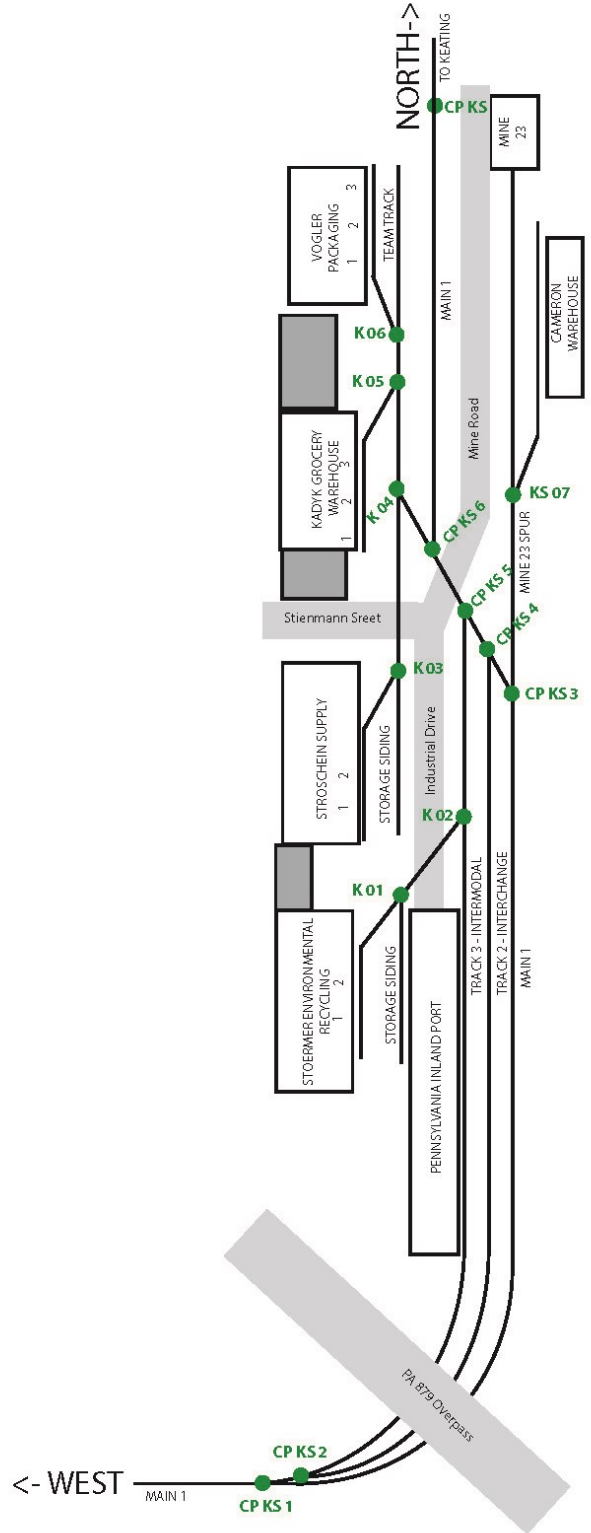

MONSERRAT INDUSTRY LOCATION MAP

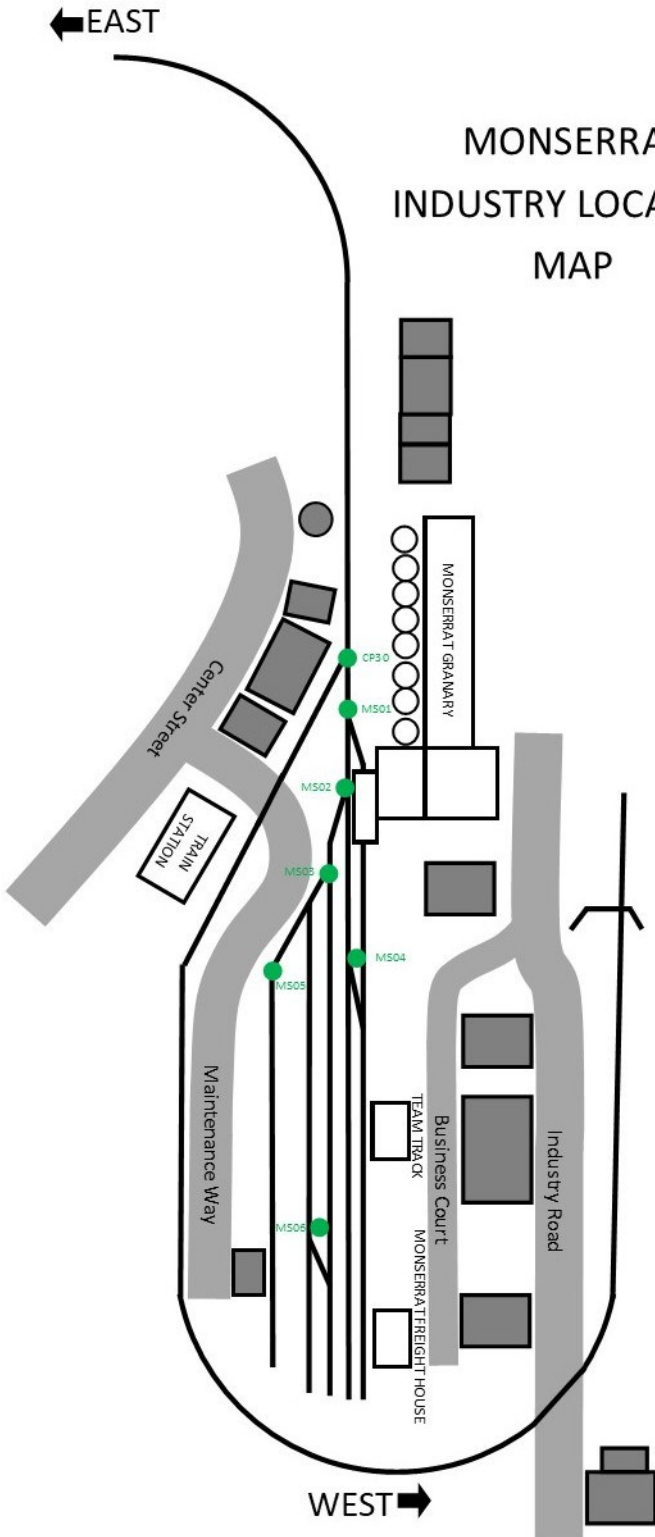

LAUREL VALLEY INDUSTRY LOCATION MAP

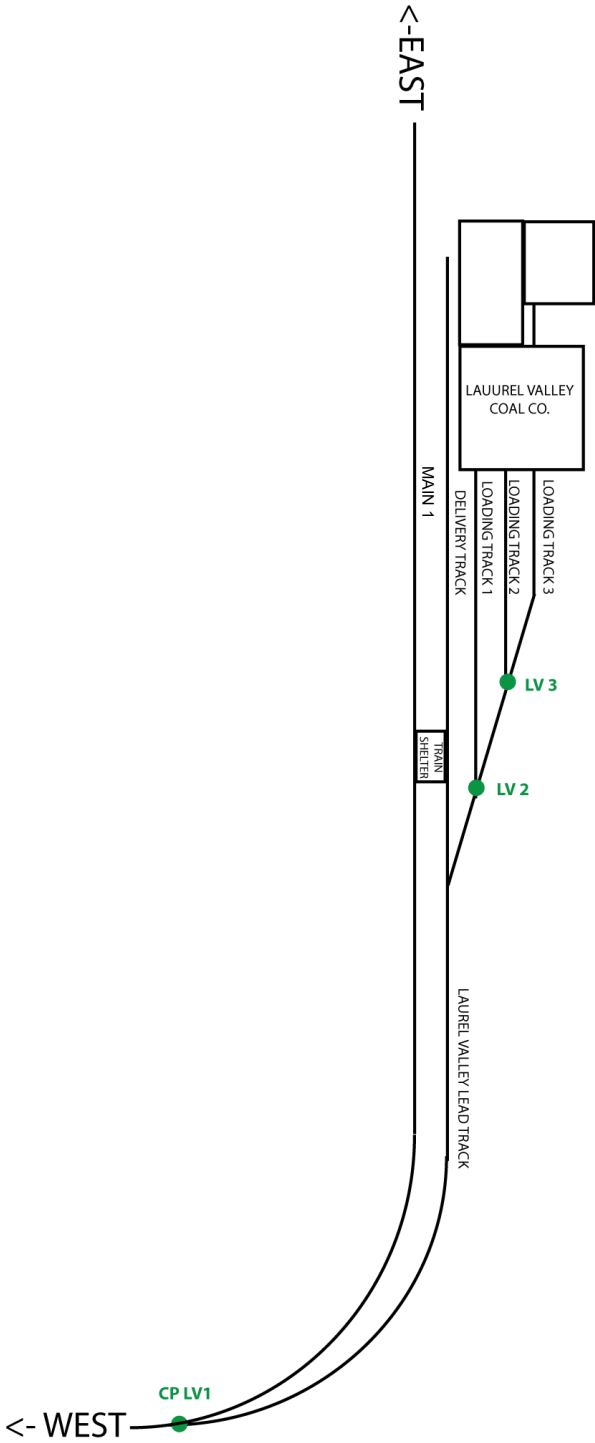

MILLS RIVER INDUSTRY LOCATION MAP

